



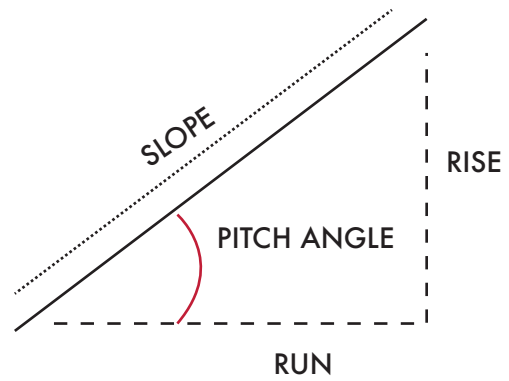

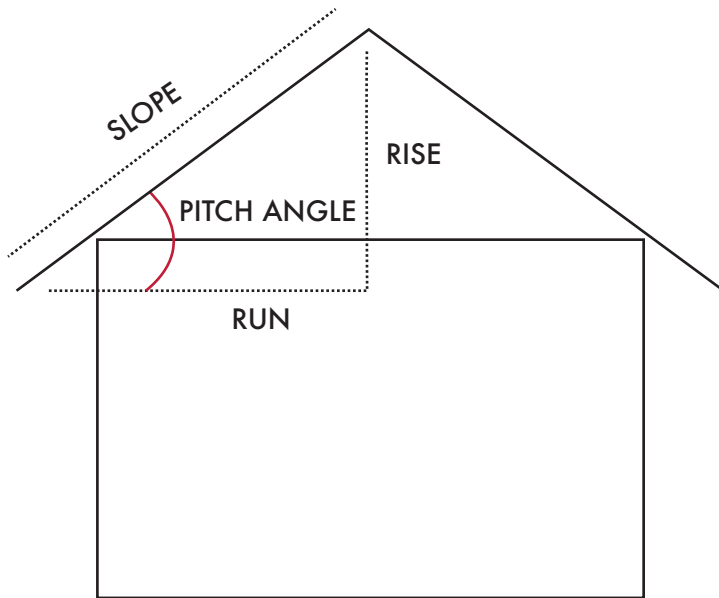













ROOF PITCH DIAGRAM CHART

HOW TO DETERMINE ROOF PITCH



$$\text{PITCH} = \frac{\text{RISE}}{\text{RUN}}$$

ROOF PITCH ANGLES

 0/12 0 degrees	 1/12 4.76 degrees	 2/12 9.46 degrees	 3/12 14.04 degrees
 4/12 18.43 degrees	 5/12 22.62 degrees	 6/12 26.57 degrees	 7/12 30.26 degrees
 8/12 33.69 degrees	 9/12 36.87 degrees	 10/12 39.81 degrees	 11/12 42.51 degrees
 12/12 45 degrees	 13/12 47.29 degrees	 14/12 49.4 degrees	 15/12 51.34 degrees