


FELT SUPPORT TRAY INSTALLATION GUIDE



STEP 1

To install the felt support tray, position on top of the fascia board and fix into place using clout nails.

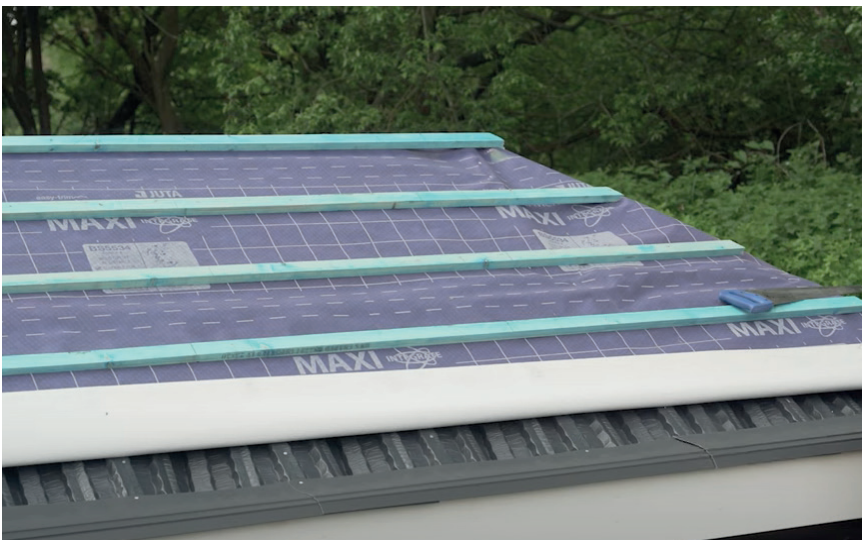

STEP 2

Adjacent trays should overlap by a minimum of 150mm to form a continuous run and support the felt.

The bottom edge of the tray should sit higher than the line of the fascia board to avoid exposure to wind and rain.



STEP 3

If needed, cut the tray using a Stanley knife to create a neat edge at the end of the run.

